

**Modification  
instruction  
PICOGLOSS 560**

**Changing accumulators PICOGLOSS 560**




testing equipment for quality management



--	--	--


### 1. Step

- remove cover and
- remove side panels

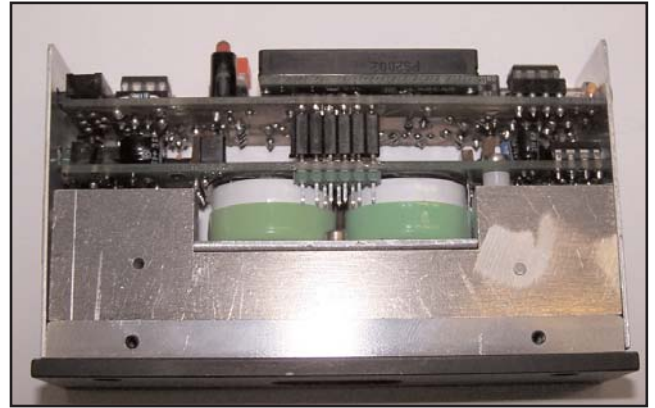


### 2. Step

- dismantle PC boards
- unsolder the accumulators

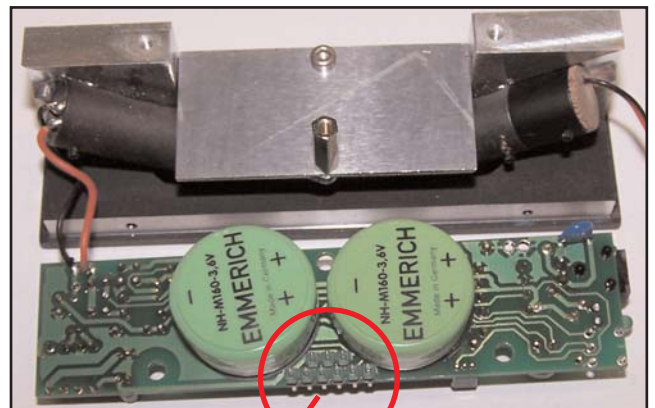


### 3. Step

- shorten the socket board

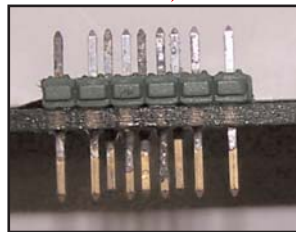

before

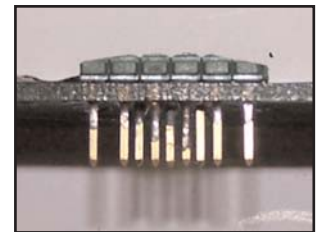

after


### 4. Step

- remove covering plate



## 5. Step

- solder the new accumulators
- place d-c-Fix strips on the new accumulators

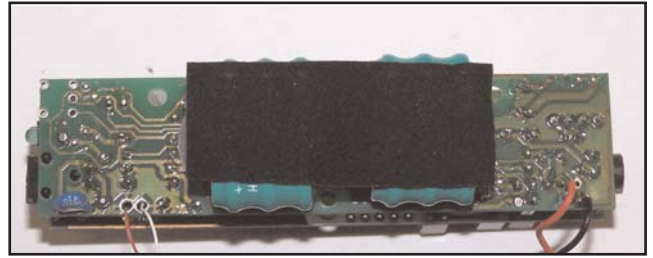


## 6. Step

- replace the PC boards on the optic board together with 1 mm washers for each



## 7. Step

- replace the side panels and
- the cover

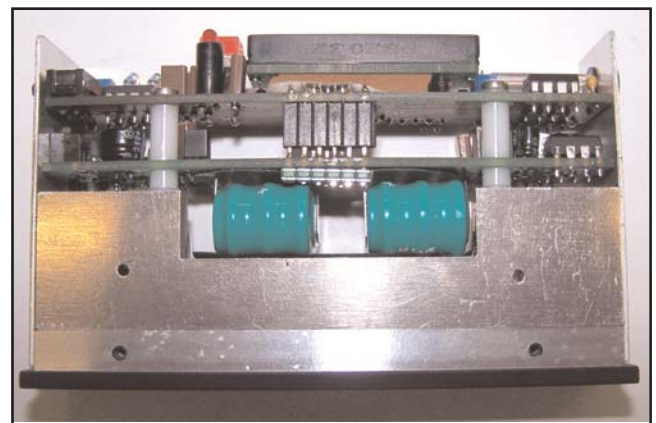

**Please note:** Slight pressure is needed when replacing side panels and cover, the accumulators are approx. 0.2 mm wider than the housing.